




NLS-EM2045 Series

Embedded 2D Barcode Scan Engine

User Guide

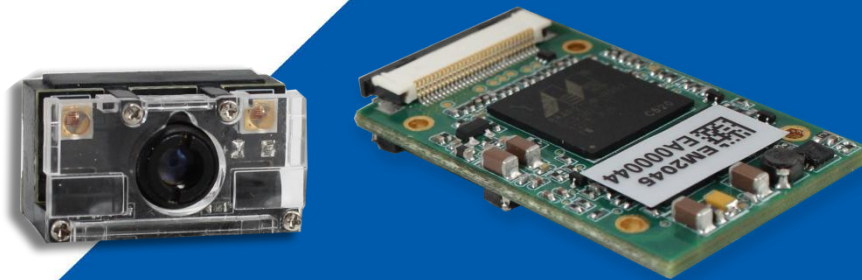

Disclaimer

© 2013 Fujian Newland Auto-ID Tech. Co., Ltd. All rights reserved.

Please read through the manual carefully before using the product and operate it according to the manual. It is advised that you should keep this manual for future reference.

Do not disassemble the device or remove the seal label from the device. Otherwise, Fujian Newland Auto-ID Tech. Co., Ltd. does not assume responsibility for the warranty or replacement.

All pictures in this manual are for reference only and actual product may differ. Regarding to the product modification and update, Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make changes to any software or product to improve reliability, function, or design at any time without notice. Besides, the information contained herein is subject to change without prior notice.

The products depicted in this manual may include software copyrighted by Fujian Newland Auto-ID Tech. Co., Ltd or a third party. The user, corporation or individual, shall not duplicate, in whole or in part, distribute, modify, decompile, disassemble, decode, reverse engineer, rent, transfer or sublicense such software without prior written consent from the copyright holders.

This manual is copyrighted. No part of this publication may be reproduced, distributed or used in any form without written permission from Newland.

Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make final interpretation of the statement above.

Fujian Newland Auto-ID Tech. Co., Ltd.

3F, Building A, No.1, Rujiang Xi Rd., Mawei, Fuzhou, Fujian, P.R. China. 350015.

<http://www.nlscan.com>

Revision History

| Version | Description | Date |
|---------|------------------|---------------|
| V1.0.0 | Initial release. | July 12, 2013 |

Table of Contents

| | |
|---|--------------|
| Revision History | - 3 - |
| Chapter 1 Getting Started..... | 1 |
| Introduction | 1 |
| About This Guide | 1 |
| Connecting EVK to PC..... | 1 |
| Barcode Scanning..... | 1 |
| Barcode Programming..... | 2 |
| Factory Defaults | 3 |
| Custom Defaults..... | 3 |
| Product Information..... | 4 |
| Chapter 2 Communication Interfaces | 5 |
| Introduction | 5 |
| Serial Communication Interface..... | 5 |
| Baud Rate | 6 |
| Parity Check..... | 7 |
| Data Bit | 7 |
| Stop Bit..... | 8 |
| Hardware Flow Control..... | 8 |
| USB Interface..... | 9 |
| USB-DataPipe..... | 9 |
| USB COM Port Emulation | 9 |
| USB HID-KBW | 9 |
| USB Country Keyboard Types | 10 |
| Beep on Unknown Character | 12 |
| Emulate ALT+Keypad..... | 12 |
| Function Key Mapping..... | 13 |
| Inter-Keystroke Delay..... | 14 |
| Caps Lock..... | 14 |
| Convert Case..... | 15 |
| Emulate Numeric Keypad..... | 16 |
| HID-POS | 17 |
| Acquire Scanned Data..... | 18 |
| VID/PID..... | 18 |

| | |
|---|-----------|
| Chapter 3 Scan Mode | 19 |
| Trigger Mode | 19 |
| Sense Mode | 19 |
| Decode Session Timeout..... | 20 |
| Timeout between Decodes (Same Barcode) | 21 |
| Continuous Mode | 22 |
| Timeout between Decodes (Same Barcode) | 23 |
| Chapter 4 Scanning Preferences | 24 |
| Introduction | 24 |
| Decode Area | 24 |
| Whole Area Decoding | 24 |
| Central Area Decoding..... | 24 |
| Specify Central Area..... | 25 |
| Chapter 5 Illumination & Aiming | 26 |
| Illumination | 26 |
| Aiming | 27 |
| Chapter 6 Beep & LED Indications | 28 |
| Introduction | 28 |
| Startup Beep | 28 |
| Good Read Beep | 28 |
| Good Read Beep Type | 29 |
| Good Read Beep Volume | 29 |
| Additional Settings for Type 1 | 30 |
| Beep Duration..... | 30 |
| Beep Frequency | 31 |
| LED Notification | 32 |
| Good Read LED | 32 |
| Good Read LED Duration..... | 32 |
| Chapter 7 Data Formatting | 33 |
| Introduction | 33 |
| General Settings | 34 |
| Enable/Disable All Prefix/Suffix | 34 |
| Prefix Sequences..... | 34 |
| AIM ID Prefix | 35 |
| Code ID Prefix..... | 35 |

| | |
|--|-----------|
| Restore All Default Code IDs..... | 36 |
| Modify Code ID | 36 |
| Custom Prefix..... | 40 |
| Enable/Disable Custom Prefix..... | 40 |
| Set Custom Prefix..... | 40 |
| Custom Suffix..... | 41 |
| Enable/Disable Custom Suffix | 41 |
| Set Custom Suffix | 41 |
| Data Packing..... | 42 |
| Normal Pack | 42 |
| Terminating Character Suffix..... | 43 |
| Enable/Disable Terminating Character Suffix..... | 43 |
| Set Terminating Character Suffix..... | 44 |
| Chapter 8 Symbologies | 45 |
| General Settings | 45 |
| Enable/Disable All Symbologies | 45 |
| Enable/Disable 1D Symbologies | 45 |
| Enable/Disable 2D Symbologies | 45 |
| 1D Symbologies..... | 46 |
| Code 128 | 46 |
| Restore Factory Defaults..... | 46 |
| Enable/Disable Code 128..... | 46 |
| Set Length Range for Code 128 | 46 |
| GS1-128 (UCC/EAN-128) | 47 |
| Restore Factory Defaults..... | 47 |
| Enable/Disable GS1-128..... | 47 |
| EAN-8 | 48 |
| Restore Factory Defaults..... | 48 |
| Enable/Disable EAN-8..... | 48 |
| Transmit Check Digit | 48 |
| Add-On Code..... | 49 |
| EAN-8 Extension | 50 |
| EAN-13 | 51 |
| Restore Factory Defaults..... | 51 |
| Enable/Disable EAN-13..... | 51 |
| Transmit Check Digit | 51 |

| | |
|--|----|
| Add-On Code..... | 52 |
| ISBN..... | 53 |
| Restore Factory Defaults..... | 53 |
| Enable/Disable ISBN..... | 53 |
| Set ISBN Format | 53 |
| UPC-E..... | 54 |
| Restore Factory Defaults..... | 54 |
| Enable/Disable UPC-E..... | 54 |
| Transmit Check Digit | 54 |
| Add-On Code..... | 55 |
| Transmit System Character “0” | 55 |
| UPC-E Extension..... | 56 |
| UPC-A..... | 57 |
| Restore Factory Defaults..... | 57 |
| Enable/Disable UPC-A..... | 57 |
| Transmit Check Digit | 57 |
| Add-On Code..... | 58 |
| Transmit Preamble Character “0” | 58 |
| Interleaved 2 of 5 | 59 |
| Restore Factory Defaults..... | 59 |
| Enable/Disable Interleaved 2 of 5 | 59 |
| Set Length Range for Interleaved 2 of 5 | 59 |
| Check Digit Verification | 60 |
| Set Discrete Lengths for Interleaved 2 of 5..... | 61 |
| ITF-14 | 62 |
| ITF-6..... | 63 |
| Matrix 2 of 5 | 64 |
| Restore Factory Defaults..... | 64 |
| Enable/Disable Matrix 2 of 5 | 64 |
| Set Length Range for Matrix 2 of 5 | 64 |
| Check Digit Verification | 65 |
| Code 39 | 66 |
| Restore Factory Defaults..... | 66 |
| Enable/Disable Code 39..... | 66 |
| Set Length Range for Code 39 | 66 |
| Check Digit Verification | 67 |
| Transmit Start/Stop Character | 68 |

| | |
|--|----|
| Enable/Disable Code 39 Full ASCII | 68 |
| Codabar | 69 |
| Restore Factory Defaults..... | 69 |
| Enable/Disable Codabar | 69 |
| Set Length Range for Codabar | 69 |
| Check Digit Verification | 70 |
| Transmit Start/Stop Character | 71 |
| Start/Stop Character Format..... | 71 |
| Code 93 | 72 |
| Restore Factory Defaults..... | 72 |
| Enable/Disable Code 93..... | 72 |
| Set Length Range for Code 93 | 72 |
| Check Digit Verification | 73 |
| GS1-Databar (RSS)..... | 74 |
| Restore Factory Defaults..... | 74 |
| Enable/Disable GS1 Databar | 74 |
| Transmit Application Identifier "01" | 74 |
| GS1 Composite Code..... | 75 |
| Restore Factory Defaults..... | 75 |
| Enable/Disable GS1 Composite Code | 75 |
| EAN/UPC Composite | 75 |
| Code 11..... | 76 |
| Restore Factory Defaults..... | 76 |
| Enable/Disable Code 11 | 76 |
| Set Length Range for Code 11..... | 76 |
| Transmit Check Digit | 77 |
| Check Digit Verification | 77 |
| Industrial 2 of 5 | 78 |
| Restore Factory Defaults..... | 78 |
| Enable/Disable Industrial 2 of 5 | 78 |
| Set Length Range for Industrial 2 of 5 | 78 |
| Check Digit Verification | 79 |
| Standard 25..... | 80 |
| Restore Factory Defaults..... | 80 |
| Enable/Disable Standard 25..... | 80 |
| Set Length Range for Standard 25..... | 80 |
| Check Digit Verification | 81 |

| | |
|---------------------------------------|----|
| Plessey | 82 |
| Restore Factory Defaults..... | 82 |
| Enable/Disable Plessey..... | 82 |
| Set Length Range for Plessey | 82 |
| Check Digit Verification | 83 |
| MSI-Plessey..... | 84 |
| Restore Factory Defaults..... | 84 |
| Enable/Disable MSI-Plessey..... | 84 |
| Set Length Range for MSI-Plessey..... | 84 |
| Transmit Check Digit | 85 |
| Check Digit Verification | 85 |
| 2D Symbologies..... | 86 |
| PDF417..... | 86 |
| Restore Factory Defaults..... | 86 |
| Enable/Disable PDF417 | 86 |
| Set Length Range for PDF417..... | 86 |
| PDF417 Inverse..... | 87 |
| PDF417 Twin Code | 88 |
| QR Code..... | 89 |
| Restore Factory Defaults..... | 89 |
| Enable/Disable QR Code | 89 |
| Set Length Range for QR Code | 89 |
| QR Twin Code | 90 |
| Aztec Code | 91 |
| Restore Factory Defaults..... | 91 |
| Enable/Disable Aztec Code..... | 91 |
| Set Length Range for Aztec Code..... | 91 |
| Read Multi-barcodes on an Image | 92 |
| Set the Number of Barcodes | 93 |
| Data Matrix..... | 94 |
| Restore Factory Defaults..... | 94 |
| Enable/Disable Data Matrix..... | 94 |
| Set Length Range for Data Matrix..... | 94 |
| Rectangular Barcode..... | 95 |
| Data Matrix Inverse | 95 |
| Data Matrix Twin Code | 96 |
| Maxicode..... | 97 |

| | |
|---|------------|
| Restore Factory Defaults..... | 97 |
| Enable/Disable Maxicode..... | 97 |
| Set Length Range for Maxicode..... | 97 |
| Chinese Sensible Code | 98 |
| Restore Factory Defaults..... | 98 |
| Enable/Disable Chinese Sensible Code | 98 |
| Set Length Range for Chinese Sensible Code | 98 |
| Chinese Sensible Code Inverse..... | 99 |
| Chapter 9 Troubleshooting | 100 |
| FAQ | 100 |
| Appendix | 102 |
| Appendix 1: Factory Defaults Table | 102 |
| Appendix 2: AIM ID Table..... | 108 |
| Appendix 3: Code ID Table | 109 |
| Appendix 4: ASCII Table | 110 |
| Appendix 5: Country Code Table | 114 |
| Appendix 6: ASCII Function Key Mapping Table | 115 |
| Appendix 7: Symbology ID Number..... | 117 |
| Appendix 8: Parameter Programming Examples | 118 |
| a. Program the Decode Session Timeout..... | 118 |
| b. Program the Timeout between Decodes (Same Barcode) | 118 |
| c. Program the Central Area | 118 |
| d. Program the Duration of Good Read Beep (Type 1)..... | 119 |
| e. Program the Frequency of Good Read Beep (Type 1) | 119 |
| f. Program the Good Read LED Duration..... | 119 |
| g. Program the Custom Prefix/Suffix | 120 |
| h. Program the Terminating Character Suffix | 120 |
| i. Program the Code ID..... | 120 |
| j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology | 121 |
| k. Program the Discrete Lengths for Interleaved 2 of 5 | 122 |
| Appendix 9: F-Key Barcodes | 123 |
| Appendix 10: Digit Barcodes..... | 125 |
| Appendix 11: Save/Cancel Barcodes | 127 |



Chapter 1 Getting Started

Introduction

The EM2045 series embedded 2D barcode scan engines, armed with CMOS imaging technology and the state-of-the-art Newland patented **UIMG**[®], a computerized image recognition system, feature fast scanning and accurate decoding on barcodes printed on paper and magnetic cards. The EM2045s can be easily integrated into OEM equipments or systems, such as hand-held, portable, or stationary barcode scanners.

Moreover, the EM2045s' fully open image acquisition interface, data interface and I/O interface allow OEM developers to accommodate their special integration needs. EM2045 Software Development Kit is provided for easy and quick development of OEM applications.

About This Guide

This guide provides programming instructions for the EM2045. Users can configure the EM2045 by scanning the programming barcodes included in this manual.

The EM2045 has been properly configured for most applications and can be put into use without further configuration. Users may check the **Appendix 1: Factory Defaults Table** for reference. Throughout the manual, asterisks (**) indicate factory default values.

Connecting EVK to PC

The EVK tool is provided to assist users in application development for the EM2045. You can connect the EVK to PC via a USB connection or an RS-232 connection. In case of USB connection, a driver is required if the EVK wants to communicate with EM2045 and receive decoded data through virtual serial port.

Barcode Scanning

Powered by area-imaging technology and Newland patented **UIMG**[®] technology, the EM2045 features fast scanning and accurate decoding. Barcodes rotated at any angle can still be read with ease. When scanning a barcode, simply center the aiming beam projected by the EM2045 over the barcode.





Barcode Programming

Scanning the **Enter Setup** barcode can enable the engine to enter the setup mode. Then you can scan a number of programming barcodes to configure your engine. To exit the setup mode, scan the **Exit Setup** barcode.

If the engine has exited the setup mode, only some special programming barcodes, such as the **Enter Setup** barcode and **Restore All Factory Defaults** barcode, can be read.



Programming barcode data (i.e. the characters under programming barcode) can be transmitted to the Host. Scan the appropriate barcode below to enable or disable the transmission of programming barcode data to the Host.



Transmit Programming Barcode Data



** Do Not Transmit Programming Barcode Data





Factory Defaults

Scanning the following barcode can restore the engine to the factory defaults. See the **Appendix 1: Factory Defaults Table** for more information.

Restoring the engine to factory defaults will not remove custom defaults stored on the engine.



Restore All Factory Defaults

Note: Use this feature with discretion.

Custom Defaults

Besides factory defaults, you can also create your custom defaults to cater for a specific application. Scanning the **Restore All Custom Defaults** barcode can reset all parameters to the custom defaults. Restoring the engine to custom defaults will not remove factory defaults stored on the engine.

Scanning the **Save as Custom Defaults** can set the current setting as custom default.

Custom defaults are stored in the non-volatile memory.



Save as Custom Defaults



Restore All Custom Defaults





0006010

Enter Setup

Product Information

Obtain Product Information: Transmit the product information to the Host straight away via the communication interface.



0003000

Obtain Product Information

Send Product Information at Startup: Transmit the product information to the Host when the engine is powered on. This feature only applies to engines using a serial communication interface.



0007010

Send Product Information at Startup



0007000

Do Not Send Product Information at Startup



0006000

** Exit Setup



Chapter 2 Communication Interfaces

Introduction

The EM2045 engine provides a TTL-232 interface and a USB interface to communicate with the host device. The host device can receive scanned data and send commands to control the engine or to access/alter the configuration information of the engine via the TTL-232 or USB interface.

Serial Communication Interface

Serial communication interface is usually used when connecting the engine to a host device (like PC, POS). However, to ensure smooth communication and accuracy of data, you need to set communication parameters (including baud rate, parity check, data bit and stop bit) to match the host device.

The serial communication interface provided by the engine is usually based on TTL-level signals. TTL-232 can be used for most application architectures. For those requiring RS-232, an external conversion circuit is needed.



Serial Communication

Default serial communication parameters are listed below. Make sure all parameters match the host requirements.

| Parameter | Factory Default |
|-----------------------|------------------|
| Serial Communication | Standard TTL-232 |
| Baud Rate | 9600 |
| Parity Check | None |
| Number of Data Bits | 8 |
| Number of Stop Bits | 1 |
| Hardware Flow Control | None |





0006010

Enter Setup

Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the baud rate to match the Host requirements.



0100030

**** Baud Rate 9600**



0100050

Baud Rate 19200



0100000

Baud Rate 1200



0100060

Baud Rate 38400



0100010

Baud Rate 2400



0100070

Baud Rate 57600



0100020

Baud Rate 4800




0100080

Baud Rate 115200



0100040

Baud Rate 14400



0006000

**** Exit Setup**

Parity Check



Data Bit





0006010

Enter Setup

Stop Bit



0102000

** 1 Stop Bit



0102010

2 Stop Bits

Hardware Flow Control

If this feature is enabled, the engine determines whether to transmit data based on CTS signal level. When CTS signal is at low level which means the serial port's cache memory of receiving device (such as PC) is full, the engine will not send data through serial port until CTS signal is set to high level by receiving device. When the engine is not ready for receiving, it will set RTS signal to low level. When sending device (such as PC) detects it, it will not send data to the engine any more to prevent data loss.

If this feature is disabled, reception/transmission of serial data will not be influenced by RTS/CTS signal.



0104010

Enable Hardware Flow Control



0104000

** Disable Hardware Flow Control

Note: Before enabling this feature, make sure that RTS/CTS signal line is contained in RS-232 cable. Without the signal line, serial communication errors will occur.



0006000

** Exit Setup



USB Interface

USB-DataPipe

A driver is required when using this protocol to communicate with the engine. Its advantages include fast data transmission and easy to use.



USB-DataPipe

USB COM Port Emulation

If you connect the engine to the Host via a USB connection, the **USB COM Port Emulation** feature allows the Host to receive data in the way as a serial port does. A driver is required for this feature.



USB COM Port Emulation

USB HID-KBW

When you connect the engine to the Host via a USB connection, you can enable the **USB HID-KBW** feature by scanning the barcode below. Then engine's transmission will be simulated as USB keyboard input. The Host receives keystrokes on the virtual keyboard. It works on a Plug and Play basis and no driver is required.



USB HID-KBW





USB Country Keyboard Types

Keyboard layouts and country codes vary from country to country. All supported keyboard types are listed in the **Country Code Table**. The default setting is US keyboard type.

To learn how to select a keyboard type, see the example below.



Select Country Code

Country Code Table (Appendix 5)

| Country/Language | Code | Country/Language | Code |
|------------------|------|---------------------|------|
| U.S. | 0 | Netherlands(Dutch) | 14 |
| Belgium | 1 | Norway | 15 |
| Brazil | 2 | Poland | 16 |
| Canada(French) | 3 | Portugal | 17 |
| Czechoslovakia | 4 | Romania | 18 |
| Denmark | 5 | Russia | 19 |
| Finland(Swedish) | 6 | Slovakia | 21 |
| France | 7 | Spain | 22 |
| Germany/Austria | 8 | Sweden | 23 |
| Greece | 9 | Switzerland(German) | 24 |
| Hungary | 10 | Turkey F | 25 |
| Israel(Hebrew) | 11 | Turkey Q | 26 |
| Italy | 12 | U.K. | 27 |
| Latin-American | 13 | Japan | 28 |





Example: Program the engine to emulate Norwegian keyboard (Norway)

1. Scan the **Enter Setup** barcode.
2. Scan the **Select Country Code** barcode.
3. Check the country code for Norway in the Country Code Table. (Norway: 15)
4. Scan the numeric barcodes “1” and “5”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode.





0006010

Enter Setup

Beep on Unknown Character

Due to the differences in keyboard layouts, some characters contained in barcode data may be unavailable on the selected keyboard. As a result, the engine fails to transmit the unknown characters.

Scan the appropriate barcode below to enable or disable the emission of beep when an unknown character is detected.



1103031

Beep on Unknown Character



1103030

**** Do Not Beep on Unknown Character**

Emulate ALT+Keypad

When Emulate ALT+Keypad is turned on, any ASCII character (0x00 - 0xff) is sent over the numeric keypad no matter which keyboard type is selected. Since sending a character involves multiple keystroke emulations, this method appears less efficient.



1103061

Emulate ALT+Keypad ON



1103060

**** Emulate ALT+Keypad OFF**



0006000

**** Exit Setup**



Function Key Mapping

When Function Key Mapping is enabled, function characters (0x00 - 0x1F) are sent as ASCII sequences over the numeric keypad. For more information, see the **Appendix 6: ASCII Function Key Mapping Table**.

A shortcut to send a function key (F1-F12) is to scan the corresponding barcode in **Appendix 9: F-Key Barcodes**.

Note: Emulate ALT+Keypad ON prevails over Enable Function Key Mapping.




Enable Function Key Mapping



** Disable Function Key Mapping

Example: Barcode data 0x16

| | | |
|--|------------------------------|--------|
|  T | Enable Function Key Mapping | Ctrl+V |
| | Disable Function Key Mapping | F1 |





0006010

Enter Setup

Inter-Keystroke Delay

This parameter specifies the delay between emulated keystrokes.



1103050

** No Delay



1103051

Short Delay (20ms)



1103052

Long Delay (40ms)

Caps Lock

The **Caps Lock ON** option can invert upper and lower case characters contained in barcode data. This inversion occurs regardless of the state of Caps Lock key on the Host's keyboard.



1103020

Caps Lock ON




1103010

** Caps Lock OFF

Note: Emulate ALT+Keypad ON/ Convert All to Upper Case/ Convert All to Lower Case prevails over Caps Lock ON.

Example: When the **Caps Lock ON** is selected, barcode data "AbC" is transmitted as "aBc".



0006000

** Exit Setup



Convert Case

Scan the appropriate barcode below to convert barcode data to your desired case.



**** No Case Conversion**



Convert All to Upper Case



Convert All to Lower Case

Example: When the **Convert All to Lower Case** feature is enabled, barcode data “AbC” is transmitted as “abc”.





0006010

Enter Setup

Emulate Numeric Keypad

When this feature is disabled, sending barcode data is emulated as keystroke(s) on main keyboard.

To enable this feature, scan the **Emulate Numeric Keypad** barcode. Sending a number (0-9) is emulated as keystroke(s) on numeric keypad, whereas sending other character like "+", "_", "*", "/" and "." is still emulated as keystrokes on main keyboard.

Numeric keypad is usually situated at the right of the main keyboard. The state of Num Lock on the simulated numeric keypad is determined by its equivalent on the Host. If Num Lock on the Host is turned off, the output of simulated numeric keypad is function key instead of number.



1103120

Emulate Numeric Keypad



1103110

**** Do Not Emulate Numeric Keypad**

Note: Make sure the Num Lock light of the Host is turned ON before enabling this feature.

Simulate ALT+Keypad ON prevails over **Emulate Numeric Keypad**.

Example: Supposing the **Emulate Numeric Keypad** feature is enabled:

if Num Lock on the Host is ON, "A4.5" is transmitted as "A4.5";

if Num Lock on the Host is OFF, "A4.5" is transmitted as follows:

1. "A" is sent as is because it is not included in numeric keypad;
2. "4" is sent as the function key "Cursor Move to Left";
3. "." is sent as the function key "Delete after the Cursor";
4. "5" is not sent as it does not correspond to any function key.



0006000

** Exit Setup



HID-POS

The HID-POS interface is recommended for new application programs. It can send up to 56 characters in a single USB report and appears more efficient than keyboard emulation.

Features:

- ✧ HID based, no custom driver required.
- ✧ Way more efficient in communication than keyboard emulation and traditional RS-232 interface.

Note: HID-POS does not require a custom driver. However, a HID interface on Windows 98 does. All HID interfaces employ standard driver provided by the operating system. Use defaults when installing the driver.



Access the engine with your program:

1. Use CreateFile to access the engine as a HID device.
2. Use ReadFile to deliver the scanned data to the application program.
3. Use WriteFile to send data to the engine.

For detailed information about USB and HID interfaces, go to www.USB.org.





0006010
Enter Setup

Acquire Scanned Data

After a barcode is decoded, the engine sends an input report as below:

| Byte | Bit | | | | | | | |
|-------|---|---|---|---|---|---|---|------------------------|
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| 0 | Report ID = 0x02 | | | | | | | |
| 1 | Barcode Length | | | | | | | |
| 2-57 | Decoded Data (1-56) | | | | | | | |
| 58-61 | Reserved (1-4) | | | | | | | |
| 62 | Symbology ID Number (Appendix 7) or N/C: 0x00 | | | | | | | |
| 63 | - | - | - | - | - | - | - | Decoded Data Continued |

VID/PID

USB uses VID (Vendor ID) and PID (Product ID) to identify and locate a device. The VID is assigned by USB Implementers Forum. Newland's vendor ID is 1EAB (Hex). A range of PIDs are used for each Newland product family. Every PID contains a base number and interface type.

| Product | Interface | PID (Hex) | PID (Dec) |
|---------|-----------|-----------|-----------|
| EM2045 | Base | 0000 | 0 |
| | HID-POS | 0001 | 1 |



0006000
** Exit Setup



Chapter 3 Scan Mode

Trigger Mode

If the Trigger Mode is enabled, receiving an active trigger signal activates a decode session. The session continues until the barcode is decoded or the active signal is no longer present. For good decode, the engine transmits decoded data via communication port. To activate another session, the Host needs to first terminate the trigger signal, wait 20ms or longer and then send an active signal.



Trigger Mode

Sense Mode

If the Sense Mode is enabled, the engine activates a decode session every time it detects a change in ambient illumination. The decode session continues until the barcode is decoded or the Decode Session Timeout expires.

Receiving a trigger signal can also activate a decode session. The decode session continues until the trigger signal becomes invalid or the barcode is decoded or the Decode Session Timeout expires. The trigger signal needs to be terminated before the engine is able to monitor ambient illumination again.



**** Sense Mode**





0006010

Enter Setup

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt in the Sense Mode. It is programmable in 1ms increments from 500ms to 3,600,000ms. The default timeout is 3,000ms. To learn how to program this parameter, see the **a. Program the Decode Session Timeout** in **Appendix 8**.



0313000

Decode Session Timeout



0006000

** Exit Setup



Timeout between Decodes (Same Barcode)

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

This parameter sets the timeout between decodes for same barcode in the Sense Mode. It is programmable in 1ms increments from 0ms to 3,600,000ms. The default timeout is 1,500ms.

To learn how to program this parameter, see the **b. Program the Timeout between Decodes (Same Barcode)** in **Appendix 8**.



Timeout between Decodes (Same Barcode)

Disable Timeout between Decodes: Allow the engine to re-read same barcode.

Enable Timeout between Decodes: Do not allow the engine to re-read same barcode before the Timeout between Decodes (Same Barcode) expires.



** Disable Timeout between Decodes



Enable Timeout between Decodes





0006010

Enter Setup

Continuous Mode

This mode enables the engine to scan/capture, decode and transmit over and over again.

If the Continuous Mode is enabled, the engine suspends/resumes barcode reading through control over the trigger signal. When barcode reading is in progress, terminating the trigger signal after having kept it valid for 30ms or longer will suspend barcode reading; when barcode reading is suspended, performing the same control over the trigger signal will resume barcode reading.



0302020

Continuous Mode



0006000

** Exit Setup



Timeout between Decodes (Same Barcode)

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

This parameter sets the timeout between decodes for same barcode in the Continuous Mode. It is programmable in 1ms increments from 0ms to 3,600,000ms. The default timeout is 1,500ms.

To learn how to program this parameter, see the **b. Program the Timeout between Decodes (Same Barcode)** in **Appendix 8**.



Timeout between Decodes (Same Barcode)

Disable Timeout between Decodes: Allow the engine to re-read same barcode.

Enable Timeout between Decodes: Do not allow the engine to re-read same barcode before the Timeout between Decodes (Same Barcode) expires.



** Disable Timeout between Decodes



Enable Timeout between Decodes





Chapter 4 Scanning Preferences

Introduction

This chapter contains information as to how to adapt your engine to various applications with preference setting. For instance, to narrow the field of view of the engine to make sure it reads barcodes intended by the user only.

Decode Area

Whole Area Decoding

When this option is enabled, the engine attempts to decode barcode(s) within its field of view, from the center to the periphery, and transmits the barcode that has been first decoded.



**** Whole Area Decoding**

Central Area Decoding

The engine attempts to decode barcode(s) within a specified central area and transmits the barcode that has been first decoded. This option allows the engine to narrow its field of view to make sure it reads only those barcodes intended by the user. For instance, if multiple barcodes are placed closely together, central area decoding in conjunction with appropriate pre-defined central area will insure that only the desired barcode is read.




Central Area Decoding



Specify Central Area

The default central area is a (Width*20%) by (Height*20%) area in the center of the engine's field of view, as shown in the figure below. You can define the central area by scanning the **Specify Central Area** barcode and numeric barcode(s) corresponding to a desired percentage (1-100). If Central Area Decoding is enabled by scanning the **Central Area Decoding** barcode, the engine only reads barcodes that intersect the predefined central area.

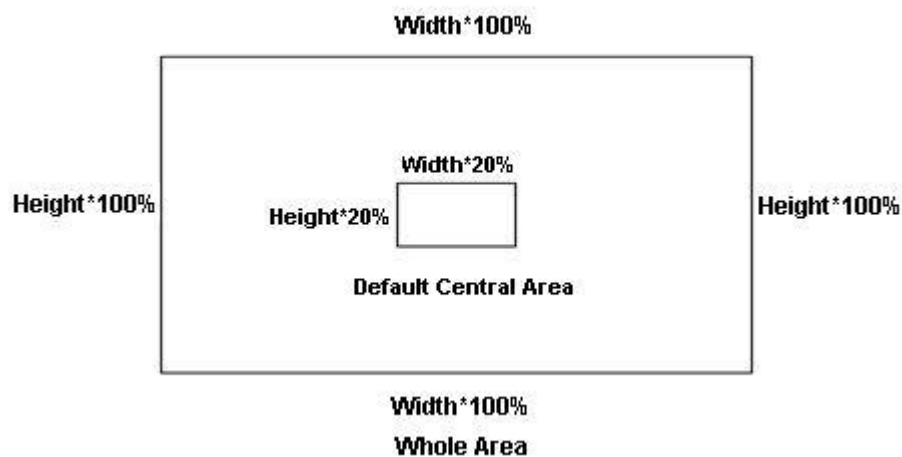

To learn how to program this parameter, see the *c. Program the Central Area* in *Appendix 8*.





0006010

Enter Setup

Chapter 5 Illumination & Aiming

Illumination

A couple of illumination options are provided to improve the lighting conditions during every image capture:

Normal: Illumination LEDs are turned on during image capture.


Always ON: Illumination LEDs keep ON after the engine is powered on.

OFF: Illumination LEDs are OFF all the time.



0200000

** Normal




0200010

Always ON



0200020

OFF



0006000

** Exit Setup



Aiming

When scanning/capturing image, the engine projects an aiming pattern which allows positioning the target barcode within its field of view and thus makes decoding easier.

Normal: The engine projects an aiming pattern only during barcode scanning/capture.

Always ON: Aiming pattern is constantly ON after the engine is powered on.

OFF: Aiming pattern is OFF all the time.





0006010

Enter Setup

Chapter 6 Beep & LED Indications

Introduction

Besides communication output, the engine can also generate a PWM signal and a pulse signal. Those outputs in conjunction with external circuits are able to drive the beeper/LED indicator.

This chapter describes how to program the beep/LED notification feature.

Startup Beep

If startup beep is enabled, the engine will beep after being turned on.



0204001

** Enable Startup Beep



0204000

Disable Startup Beep

Good Read Beep

The engine can be configured to beep after good decode. Beep type (frequency) and volume (duty circle of PWM) are also user programmable.



0203010

** Good Read Beep On



0203000

Good Read Beep Off



0006000

** Exit Setup

Good Read Beep Type



0203020
** Type 1



0203021
Type 2



0203022
Type 3

Good Read Beep Volume



0203030
** Loud



0203032
Low



0203031
Medium



0006010

Enter Setup

Additional Settings for Type 1

Beep duration and frequency settings are designed only for Type 1 (which is a single tone) to serve specific applications.

Beep Duration



0203050

** 80ms



0203051

40ms

To learn how to program custom duration, see the *d. Program the Duration of Good Read Beep (Type 1)* in **Appendix 8**.



0203052

Custom (20~300ms)



0006000

** Exit Setup



Beep Frequency



0203060

800Hz



0203061

1600Hz



0203062

****2730Hz**



0203063

4200Hz

You may select the frequency same as the center frequency of your buzzer. To learn how to program custom frequency, see the *e. Program the Frequency of Good Read Beep (Type 1)* in *Appendix 8*.



0203064

Custom (20~20000 Hz)



0006000

****Exit Setup**



0006010

Enter Setup

LED Notification

Good Read LED

Note: This feature is available to all scan modes.



0206010

Good Read LED Off



0206011

** Good Read LED On

Good Read LED Duration

The user can set the LED notification duration for good read.



0206020

** Short (20ms)



0206021

Medium (120ms)



0206022

Long (220ms)



0206023

Prolonged (320ms)

To learn how to program custom duration, see the *f. Program the Good Read LED Duration* in **Appendix 8**.



0206024

Custom (1 - 10000ms)



0006000

** Exit Setup



Chapter 7 Data Formatting

Introduction

In many applications, barcode data needs to be edited and distinguished from one another.

Usually AIM ID and Code ID can be used as identifiers, but in some special cases customized prefix and terminating character suffix like Carriage Return (CR) or Line Feed (LF) can also be the alternatives.

Data formatting often refers to appending prefix/suffix to original data, data packing, etc.

Data formatting procedure:

- ✧ Append AIM ID/Code ID/custom prefix before the decoded data
- ✧ Append custom suffix after the decoded data
- ✧ Pack data
- ✧ Append terminating character to the end of the data





0006010
Enter Setup

General Settings

Enable/Disable All Prefix/Suffix

- ✧ **Disable All Prefix/Suffix:** Transmit barcode data with no prefix/suffix.
- ✧ **Enable All Prefix/Suffix:** Allow user to append Code ID prefix, AIM ID prefix, custom prefix/suffix and terminating character to the barcode data before the transmission.



0311010
Enable All Prefix/Suffix



0311000
**** Disable All Prefix/Suffix**

Prefix Sequences



0317010
**** Code ID+Custom Prefix+AIM ID**



0317040
Custom Prefix+Code ID+AIM ID



0006000
**** Exit Setup**



AIM ID Prefix

AIM (Automatic Identification Manufacturers) IDs and ISO/IEC 15424 standards define symbology identifiers and data carrier identifiers. (For the details, see the **Appendix 2: AIM ID Table**). If AIM ID prefix is enabled, the engine will add the symbology identifier before the scanned data after decoding.



Enable AIM ID Prefix



**** Disable AIM ID Prefix**

Code ID Prefix

Code ID can also be used to identify barcode type. Unlike AIM ID, Code ID is user programmable. Code ID can only consist of one or two English letters.



Enable Code ID Prefix



**** Disable Code ID Prefix**





Restore All Default Code IDs

For the information of default Code IDs, see the *Appendix 3: Code ID Table*.



Restore All Default Code IDs

Modify Code ID

Code ID of each symbology can be programmed separately. See the following example to learn how to program a Code ID.

Example: Set the Code ID of PDF417 to “p”

1. Check the hex value of “p” in the *Appendix 4: ASCII Table*. (“p”: 70)
2. Scan the **Enter Setup** barcode.
3. Scan the **Modify PDF417 Code ID** barcode.
4. Scan the numeric barcodes “7” and “0”. (See the *Appendix 10: Digit Barcodes*)
5. Scan the **Save** barcode. (See the *Appendix 11: Save/Cancel Barcodes*)
6. Scan the **Exit Setup** barcode.





Modify Code ID Barcodes



0005000
Modify PDF417 Code ID



0005030
Modify Data Matrix Code ID



0005010
Modify QR Code ID



0005040
Modify Maxicode Code ID



0005020
Modify Aztec Code ID



0005070
Modify Chinese Sensible Code ID



0004040
Modify EAN-8 Code ID



0004050
Modify EAN-13 Code ID



0004060
Modify UPC-E Code ID



0004070
Modify UPC-A Code ID





0006010

Enter Setup

Modify Code ID Barcodes (continued)



0004020

Modify Code 128 Code ID



0004030

Modify UCC/EAN-128 Code ID



0004130

Modify Code 39 Code ID



0004170

Modify Code 93 Code ID



0004080

Modify Interleaved 2 of 5 Code ID



0004090

Modify ITF-14 Code ID



0004100

Modify ITF-6 Code ID



0004150

Modify Codabar Code ID



0004250

Modify Industrial 25 Code ID



0004260

Modify Standard 25 Code ID



0006000

** Exit Setup



Modify Code ID Barcodes (continued)



0004280
Modify Code 11 Code ID



0004270
Modify Plessey Code ID



0004290
Modify MSI-Plessey Code ID



0004310
Modify GS1 Databar Code ID



0004300
Modify Composite Code ID



0004240
Modify ISBN Code ID



0004110
Modify Matrix 2 of 5 Code ID





Custom Prefix

Enable/Disable Custom Prefix

If custom prefix is enabled, you are allowed to append to the data a user-defined prefix that cannot exceed 10 characters.



Enable Custom Prefix



** Disable Custom Prefix

Set Custom Prefix

To set this parameter, scan the **Set Custom Prefix** barcode, the numeric barcodes corresponding to the hexadecimal value of a desired prefix, and the **Save** barcode.

Note: A custom prefix cannot exceed 10 characters.



Set Custom Prefix

Example: Set the custom prefix to “CODE”

1. Check the hex values of “CODE” in the **ASCII Table**. (“CODE”: 43, 4F, 44, 45)
2. Scan the **Enter Setup** barcode.
3. Scan the **Set Custom Prefix** barcode.
4. Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5”. (See the **Digit Barcodes**)
5. Scan the **Save** barcode. (See the **Save/Cancel Barcodes**)
6. Scan the **Exit Setup** barcode.





Custom Suffix

Enable/Disable Custom Suffix

If custom suffix is enabled, you are allowed to append to the data a user-defined suffix that cannot exceed 10 characters.



Enable Custom Suffix



** Disable Custom Suffix

Set Custom Suffix

To set this parameter, scan the **Set Custom Suffix** barcode, the numeric barcodes corresponding to the hexadecimal value of a desired prefix, and the **Save** barcode.

Note: A custom suffix cannot exceed 10 characters.



Set Custom Suffix

Example: Set the custom suffix to "CODE"

1. Check the hex values of "CODE" in the **ASCII Table**. ("CODE": 43, 4F, 44, 45)
2. Scan the **Enter Setup** barcode.
3. Scan the **Set Custom Suffix** barcode.
4. Scan the numeric barcodes "4", "3", "4", "F", "4", "4", "4" and "5". (See the **Digit Barcodes**)
5. Scan the **Save** barcode. (See the **Save/Cancel Barcodes**)
6. Scan the **Exit Setup** barcode.





Data Packing

For some applications that require high data integrity and reliability, data packing can help you accomplish that.

Transmission of packed data needs to work with certain software on the Host.

Data packing influences data format and is not recommended for general applications.



**** Disable Data Packing**

Normal Pack

Normal Pack format: [STX + ATTR + LEN] + [AL_TYPE + DATA] + [LRC]

- ✧ STX: 0x02
- ✧ ATTR: 0x00
- ✧ LEN: Barcode data length is expressed in 2 bytes, ranging from 0 to 65535.
- ✧ AL_TYPE: 0x36
- ✧ DATA: Raw barcode data.
- ✧ LRC: Checksum.

LRC calculation algorithm: computation sequence: 0xFF+LEN+AL_TYPE+DATA; computation method is XOR, byte by byte.

To enable normal pack, scan the following barcode.



Normal Pack





Terminating Character Suffix

A terminating character, such as carriage return (CR) and line feed (LF), can be used to mark the end of data, which means nothing can be added after it.

A terminating character suffix can contain one or two characters.

Enable/Disable Terminating Character Suffix

To enable/disable terminating character suffix, scan the appropriate barcode below.



Enable Terminating Character Suffix



**** Disable Terminating Character Suffix**





0006010

Enter Setup

Set Terminating Character Suffix

The engine provides a shortcut for setting the terminating character suffix to 0x0D (CR) or 0x0D,0x0A (CRLF) by scanning the following barcode.



0310010

Terminating Character 0x0D



0310020

Terminating Character 0x0D,0x0A

To set a terminating character suffix, scan the **Set Terminating Character Suffix** barcode, the numeric barcodes corresponding to the hexadecimal value of a desired terminating character, and the **Save** barcode.

Note: A terminating character suffix cannot exceed 2 characters.



0310000

Set Terminating Character Suffix

Example: Set the terminating character suffix to 0x0A

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Terminating Character Suffix** barcode.
3. Scan the numeric barcodes "0" and "A".
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode.



0006000

** Exit Setup



Chapter 8 Symbologies

General Settings

Enable/Disable All Symbologies

If the **Disable All Symbologies** feature is enabled, the engine can only identify the programming barcodes.



Enable All Symbologies



Disable All Symbologies

Enable/Disable 1D Symbologies



Enable 1D Symbologies



Disable 1D Symbologies

Enable/Disable 2D Symbologies



Enable 2D Symbologies



Disable 2D Symbologies





0006010
Enter Setup

1D Symbologies

Code 128

Restore Factory Defaults



Restore the Factory Defaults of Code 128

Enable/Disable Code 128



** Enable Code 128



Disable Code 128

Set Length Range for Code 128

The engine can be configured to only decode Code 128 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.



Set the Minimum Length (Default: 1)



Set the Maximum Length (Default: 48)



0006000
** Exit Setup



GS1-128 (UCC/EAN-128)

Restore Factory Defaults



Restore the Factory Defaults of GS1-128

Enable/Disable GS1-128



**** Enable GS1-128**



Disable GS1-128





0006010

Enter Setup

EAN-8

Restore Factory Defaults



0401000

Restore the Factory Defaults of EAN-8

Enable/Disable EAN-8



0401020

** Enable EAN-8



0401010

Disable EAN-8

Transmit Check Digit

EAN-8 is 8 digits in length with the last one as its check digit used to verify the integrity of the data.



0401040

** Transmit EAN-8 Check Digit



0401030

Do Not Transmit EAN-8 Check Digit



0006000

** Exit Setup

Add-On Code

An EAN-8 barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is an EAN-8 barcode while the part circled by red dotted line is add-on code.



Enable 2-Digit Add-On Code



**** Disable 2-Digit Add-On Code**



Enable 5-Digit Add-On Code



**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of EAN-8 barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes EAN-8 and ignores the add-on code when presented with an EAN-8 plus add-on barcode. It can also decode EAN-8 barcodes without add-on codes.



0006010
Enter Setup

EAN-8 Extension

Disable EAN-8 Zero Extend: Transmit EAN-8 barcodes as is.

Enable EAN-8 Zero Extend: Add five leading zeros to decoded EAN-8 barcodes to extend to 13 digits.



0401100
Enable EAN-8 Zero Extend



0401090
**** Disable EAN-8 Zero Extend**



0006000
**** Exit Setup**



EAN-13

Restore Factory Defaults



Restore the Factory Defaults of EAN-13

Enable/Disable EAN-13



** Enable EAN-13



Disable EAN-13

Transmit Check Digit



** Transmit EAN-13 Check Digit



Do Not Transmit EAN-13 Check Digit





0006010
Enter Setup

Add-On Code

An EAN-13 barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0402060

Enable 2-Digit Add-On Code



0402050

**** Disable 2-Digit Add-On Code**



0402080

Enable 5-Digit Add-On Code



0402070

**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of EAN-13 barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes EAN-13 and ignores the add-on code when presented with an EAN-13 plus add-on barcode. It can also decode EAN-13 barcodes without add-on codes.



0006000
**** Exit Setup**



ISBN

Restore Factory Defaults



Restore the Factory Defaults of ISBN

Enable/Disable ISBN



Enable ISBN



** Disable ISBN

Set ISBN Format



**ISBN-13



ISBN-10





0006010

Enter Setup

UPC-E

Restore Factory Defaults



0403000

Restore the Factory Defaults of UPC-E

Enable/Disable UPC-E



0403020

** Enable UPC-E



0403010

Disable UPC-E

Transmit Check Digit



0403040

** Transmit UPC-E Check Digit



0403030

Do Not Transmit UPC-E Check Digit



0006000

** Exit Setup



Add-On Code

A UPC-E barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



Enable 2-Digit Add-On Code



**** Disable 2-Digit Add-On Code**



Enable 5-Digit Add-On Code



**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of UPC-E barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes UPC-E and ignores the add-on code when presented with a UPC-E plus add-on barcode. It can also decode UPC-E barcodes without add-on codes.

Transmit System Character “0”

The first character of UPC-E barcode is the system character “0”.



Transmit System Character “0”



**** Do Not Transmit System Character “0”**





0006010

Enter Setup

UPC-E Extension

Disable UPC-E Extend: Transmit UPC-E barcodes as is.

Enable UPC-E Extend: Extend UPC-E barcodes to make them compatible in length to UPC-A.



0403120

Enable UPC-E Extend



0403110

**** Disable UPC-E Extend**



0006000

** Exit Setup



UPC-A

Restore Factory Defaults



Restore the Factory Defaults of UPC-A

Enable/Disable UPC-A



** Enable UPC-A



Disable UPC-A

Transmit Check Digit



** Transmit UPC-A Check Digit



Do Not Transmit UPC-A Check Digit





Add-On Code

A UPC-A barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



Enable 2-Digit Add-On Code



**** Disable 2-Digit Add-On Code**



Enable 5-Digit Add-On Code



**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of UPC-A barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes UPC-A and ignores the add-on code when presented with a UPC-A plus add-on barcode. It can also decode UPC-A barcodes without add-on codes.

Transmit Preamble Character “0”



Transmit Preamble Character “0”



**** Do not Transmit Preamble Character “0”**

Note: The preamble character “0” usually does not appear in printed UPC-A barcodes.





Interleaved 2 of 5

Restore Factory Defaults



Restore the Factory Defaults of Interleaved 2 of 5

Enable/Disable Interleaved 2 of 5



** Enable Interleaved 2 of 5



Disable Interleaved 2 of 5

Set Length Range for Interleaved 2 of 5

The engine can be configured to only decode Interleaved 2 of 5 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in **Appendix 8**.



Set the Minimum Length (Default: 6)



Set the Maximum Length (Default: 80)





0006010
Enter Setup

Check Digit Verification

A check digit is optional for Interleaved 2 of 5 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Interleaved 2 of 5 barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



0405050
** Disable



0405060


Do Not Transmit Check Digit After Verification



0405070

Transmit Check Digit After Verification

Note: If the **Do Not Transmit Check Digit After Verification** option is enabled, Interleaved 2 of 5 barcodes with a length that is less than the configured minimum length after having the check digit excluded will not be decoded. (For example, when the **Do Not Transmit Check Digit After Verification** option is enabled and the minimum length is set to 4, Interleaved 2 of 5 barcodes with a total length of 4 characters including the check digit cannot be read.)



0006000
** Exit Setup

Set Discrete Lengths for Interleaved 2 of 5

The engine can be configured to only decode Interleaved 2 of 5 barcodes within a specific length range or with a couple of discrete lengths.

The length must be an even number not greater than 64 and consist of three digits (a leading zero or zeros may need to be added to meet the length requirement). For more information, see the **k. Program the Discrete Lengths for Interleaved 2 of 5** in **Appendix 8**.



Enable the Discrete Lengths



**** Disable the Discrete Lengths**

The discrete lengths become valid only when the **Enable the Discrete Lengths** option is enabled.



Set the Discrete Length



Delete the Discrete Length



0006010

Enter Setup

ITF-14

ITF-14 is a special kind of Interleaved 2 of 5 with a length of 14 characters and the last character as the check character.



0405080

**** Disable ITF-14**



0405090

Enable ITF-14 But Do Not Transmit Check Digit



0405100

Enable ITF-14 and Transmit Check Digit

Note: It is advisable not to enable ITF-14 and Interleaved 2 of 5 at the same time.



0006000

**** Exit Setup**



ITF-6

ITF-6 is a special kind of Interleaved 2 of 5 with a length of 6 characters and the last character as the check character.



**** Disable ITF-6**



Enable ITF-6 But Do Not Transmit Check Digit



Enable ITF-6 and Transmit Check Digit

Note: It is advisable not to enable ITF-6 and Interleaved 2 of 5 at the same time.





0006010

Enter Setup

Matrix 2 of 5

Restore Factory Defaults



0406000

Restore the Factory Defaults of Matrix 2 of 5

Enable/Disable Matrix 2 of 5



0406020

Enable Matrix 2 of 5



0406010

** Disable Matrix 2 of 5

Set Length Range for Matrix 2 of 5

The engine can be configured to only decode Matrix 2 of 5 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.



0406030

Set the Minimum Length (Default: 4)



0406040

Set the Maximum Length (Default: 80)



0006000

** Exit Setup

Check Digit Verification

A check digit is optional for Matrix 2 of 5 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Matrix 2 of 5 barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Matrix 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Matrix 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



Do Not Transmit Check Digit After Verification



Transmit Check Digit After Verification



0006010

Enter Setup

Code 39

Restore Factory Defaults



0408000

Restore the Factory Defaults of Code 39

Enable/Disable Code 39



0408020

** Enable Code 39



0408010

Disable Code 39

Set Length Range for Code 39

The engine can be configured to only decode Code 39 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.



0408030

Set the Minimum Length (Default: 4)



0408040

Set the Maximum Length (Default: 48)



0006000

** Exit Setup



Check Digit Verification

A check digit is optional for Code 39 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Code 39 barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Code 39 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Code 39 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



Do Not Transmit Check Digit After Verification



Transmit Check Digit After Verification





0006010

Enter Setup

Transmit Start/Stop Character



0408090

**** Transmit Start/Stop Character**



0408080

Do Not Transmit Start/Stop Character

Enable/Disable Code 39 Full ASCII

By default, the engine is only able to read some ASCII characters. You can configure your engine to identify all ASCII characters by scanning the appropriate barcode below.



0408110

Enable Code 39 Full ASCII



0408100

**** Disable Code 39 Full ASCII**



0006000

**** Exit Setup**



Codabar

Restore Factory Defaults



Restore the Factory Defaults of Codabar

Enable/Disable Codabar



** Enable Codabar



Disable Codabar

Set Length Range for Codabar

The engine can be configured to only decode Codabar barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.



Set the Minimum Length (Default: 2)



Set the Maximum Length (Default: 60)





0006010

Enter Setup

Check Digit Verification

A check digit is optional for Codabar and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Codabar barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Codabar barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Codabar barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



0409050

** Disable



0409060

Do Not Transmit Check Digit After Verification



0409070

Transmit Check Digit After Verification



0006000

** Exit Setup



Transmit Start/Stop Character



**** Transmit Start/Stop Character**



Do Not Transmit Start/Stop Character

Start/Stop Character Format

You can choose your desired start/stop characters format by scanning the appropriate barcode below.



**** ABCD/ABCD as the Start/Stop Character**



ABCD/TN*E as the Start/Stop Character



**** Start/Stop Character in Uppercase**



Start/Stop Character in Lowercase





0006010

Enter Setup

Code 93

Restore Factory Defaults



0410000

Restore the Factory Defaults of Code 93

Enable/Disable Code 93



0410020

Enable Code 93



0410010

** Disable Code 93

Set Length Range for Code 93

The engine can be configured to only decode Code 93 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbolology* in **Appendix 8**.



0410030

Set the Minimum Length (Default: 1)



0410040

Set the Maximum Length (Default: 48)



0006000

** Exit Setup



Check Digit Verification

Check digits are optional for Code 93 and can be added as the last two digits, which are calculated values used to verify the integrity of the data.

Disable: The engine transmits Code 93 barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Code 93 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted except the last two digits, whereas those failing them will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Code 93 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted, whereas those failing them will not be transmitted.



Do Not Transmit Check Digit After Verification



Transmit Check Digit After Verification





0006010

Enter Setup

GS1-Databar (RSS)

Restore Factory Defaults



0413000

Restore the Factory Defaults of GS1-Databar

Enable/Disable GS1 Databar



0413020

** Enable GS1-DataBar



0413010

Disable GS1-DataBar

Transmit Application Identifier "01"



0413060

** Transmit Application Identifier "01"



0413050

Do Not Transmit Application Identifier "01"



0006000

** Exit Setup



GS1 Composite Code

Restore Factory Defaults



Restore the Factory Defaults of GS1 Composite Code

Enable/Disable GS1 Composite Code



Enable GS1 Composite Code



** Disable GS1 Composite Code

EAN/UPC Composite

When EAN/UPC Composite is enabled, the engine will not be able to read standard EAN/UPC barcodes.



Enable EAN/UPC Composite



** Disable EAN/UPC Composite





0006010

Enter Setup

Code 11

Restore Factory Defaults



0415000

Restore the Factory Defaults of Code 11

Enable/Disable Code 11



0415020

Enable Code 11



0415010

** Disable Code 11

Set Length Range for Code 11

The engine can be configured to only decode Code 11 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.




0415030

Set the Minimum Length (Default: 4)



0415040

Set the Maximum Length (Default: 48)



0006000

** Exit Setup

Transmit Check Digit



0415120

**** Transmit Check Digit**



0415110

Do Not Transmit Check Digit

Check Digit Verification



0415050

Disable



0415060

**** One Check Digit, MOD11**



0415070

Two Check Digits, MOD11/MOD11



0415080

Two Check Digits, MOD11/MOD9



0415090

**One Check Digit, MOD11 (Len<=10)
Two Check Digits, MOD11/MOD11 (Len>10)**



0415100

**One Check Digit, MOD11 (Len<=10)
Two Check Digits, MOD11/MOD9 (Len>10)**



0006000
****Exit Setup**



0006010

Enter Setup

Industrial 2 of 5

Restore Factory Defaults



0417000

Restore the Factory Defaults of Industrial 2 of 5

Enable/Disable Industrial 2 of 5



0417020

Enable Industrial 2 of 5



0417010

** Disable Industrial 2 of 5

Set Length Range for Industrial 2 of 5

The engine can be configured to only decode Industrial 2 of 5 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.



0417030

Set the Minimum Length (Default: 6)



0417040

Set the Maximum Length (Default: 48)



0006000

** Exit Setup

Check Digit Verification

A check digit is optional for Industrial 2 of 5 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Industrial 2 of 5 barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Industrial 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Industrial 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



Do Not Transmit Check Digit After Verification



Transmit Check Digit After Verification



0006010

Enter Setup

Standard 25

Restore Factory Defaults



0418000

Restore the Factory Defaults of Standard 25

Enable/Disable Standard 25



0418020

Enable Standard 25



0418010

** Disable Standard 25

Set Length Range for Standard 25

The engine can be configured to only decode Standard 25 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.



0418030

Set the Minimum Length (Default: 6)



0418040

Set the Maximum Length (Default: 48)



0006000

** Exit Setup

Check Digit Verification

A check digit is optional for Standard 25 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Standard 25 barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Standard 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Standard 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



Do Not Transmit Check Digit After Verification



Transmit Check Digit After Verification



0006010

Enter Setup

Plessey

Restore Factory Defaults



0419000

Restore the Factory Defaults of Plessey

Enable/Disable Plessey



0419020

Enable Plessey



0419010

** Disable Plessey

Set Length Range for Plessey

The engine can be configured to only decode Plessey barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.



0419030

Set the Minimum Length (Default: 4)



0419040

Set the Maximum Length (Default: 48)



0006000

** Exit Setup



Check Digit Verification

Check digits are optional for Plessey and can be added as the last two digits, which are calculated values used to verify the integrity of the data.

Disable: The engine transmits Plessey barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Plessey barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted except the last two digits, whereas those failing them will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Plessey barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted, whereas those failing them will not be transmitted.



Do Not Transmit Check Digit After Verification



**** Transmit Check Digit After Verification**





0006010

Enter Setup

MSI-Plessey

Restore Factory Defaults



0420000

Restore the Factory Defaults of MSI-Plessey

Enable/Disable MSI-Plessey



0420020

Enable MSI-Plessey



0420010

** Disable MSI-Plessey

Set Length Range for MSI-Plessey

The engine can be configured to only decode MSI-Plessey barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.




0420030

Set the Minimum Length (Default: 4)



0420040

Set the Maximum Length (Default: 48)



0006000

** Exit Setup

Transmit Check Digit



**** Transmit Check Digit**



Do Not Transmit Check Digit

Check Digit Verification



Disable



**** One Check Digit, MOD10**



Two Check Digits, MOD10/MOD10



Two Check Digits, MOD10/MOD11



0006010
Enter Setup

2D Symbologies

PDF417

Restore Factory Defaults



0501000

Restore the Factory Defaults of PDF417

Enable/Disable PDF417



0501020

** Enable PDF417



0501010

Disable PDF417

Set Length Range for PDF417

The engine can be configured to only decode PDF417 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.




0501030

Set the Minimum Length (Default: 1)



0501040

Set the Maximum Length (Default: 2710)



0006000
** Exit Setup



PDF417 Inverse

Regular Barcode: Dark bars on a bright background.

Inverse Barcode: Bright bars on a dark background.



**** Decode Regular PDF417 Barcodes Only**



Decode Inverse PDF417 Barcodes Only



Decode Both





0006010
Enter Setup

PDF417 Twin Code

PDF417 twin code is 2 PDF417 barcodes paralleled vertically or horizontally. Two of them must have the same direction and similar specifications and be placed closely together.

There are 3 options for reading PDF417 twin codes:

Single PDF417 Only: Read either PDF417 code.

Twin PDF417 Only: Read both PDF417 codes. Transmission sequence: left (upper) PDF417 code followed by right (lower) PDF417 code.

Both: Read both PDF417 codes. If successful, transmit as twin PDF417 only. Otherwise, try single PDF417 only.



**** Single PDF417 Only**



Twin PDF417 Only



Both



0006000
**** Exit Setup**



QR Code

Restore Factory Defaults



Restore the Factory Defaults of QR Code

Enable/Disable QR Code



** Enable QR Code



Disable QR Code

Set Length Range for QR Code

The engine can be configured to only decode QR Code barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.



Set the Minimum Length (Default: 1)



Set the Maximum Length (Default: 7089)





0006010
Enter Setup

QR Twin Code

QR twin code is 2 QR barcodes paralleled vertically or horizontally. Two of them must have the same direction and similar specifications and be placed closely together.

There are 3 options for reading QR twin codes:

Single QR Only: Read either QR code.

Twin QR Only: Read both QR codes. Transmission sequence: left (upper) QR code followed by right (lower) QR code.

Both: Read both QR codes. If successful, transmit as twin QR only. Otherwise, try single QR only.




**** Single QR Only**



Twin QR Only



Both



0006000
**** Exit Setup**



Aztec Code

Restore Factory Defaults



Restore the Factory Defaults of Aztec Code

Enable/Disable Aztec Code



Enable Aztec Code



** Disable Aztec Code

Set Length Range for Aztec Code

The engine can be configured to only decode Aztec Code barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.



Set the Minimum Length (Default: 1)



Set the Maximum Length (Default: 3832)





0006010

Enter Setup


Read Multi-barcodes on an Image

There are three modes:

Mode 1: Read one barcode only.

Mode 2: Read fixed number of barcodes only.

Mode 3: Composite Reading. Read fixed number of barcodes first. If unsuccessful, read one barcode only.



0503070

** Mode 1




0503080

Mode 2



0503090

Mode 2



0006000

** Exit Setup

Set the Number of Barcodes





0006010

Enter Setup

Data Matrix

Restore Factory Defaults



0504000

Restore the Factory Defaults of Data Matrix

Enable/Disable Data Matrix



0504020

** Enable Data Matrix



0504010

禁止识读 Data Matrix

Set Length Range for Data Matrix

The engine can be configured to only decode Data Matrix barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.



0504030

Set the Minimum Length (Default: 1)



0504040

Set the Maximum Length (Default: 3116)



0006000

** Exit Setup

Rectangular Barcode



* Enable Rectangular Barcode



Disable Rectangular Barcode

Data Matrix Inverse

Regular Barcode: Dark bars on a bright background.

Inverse Barcode: Bright bars on a dark background.



** Decode Regular Data Matrix Barcodes Only



Decode Inverse Data Matrix Barcodes Only



Decode Both



0006010

Enter Setup

Data Matrix Twin Code

Data Matrix twin code is 2 Data Matrix barcodes paralleled vertically or horizontally. Two of them must have the same direction and similar specifications and be placed closely together.

There are 3 options for reading Data Matrix twin codes:

Single Data Matrix Only: Read either Data Matrix code.


Twin Data Matrix Only: Read both Data Matrix codes. Transmission sequence: left (upper) Data Matrix code followed by right (lower) Data Matrix code.

Both: Read both Data Matrix codes. If successful, transmit as twin Data Matrix only. Otherwise, try single Data Matrix only.



0504070

**** Single Data Matrix Only**



0504080

Twin Data Matrix Only



0504090

Both



0006000

**** Exit Setup**



Maxicode

Restore Factory Defaults



Restore the Factory Defaults of Maxicode

Enable/Disable Maxicode



Enable Maxicode



** Disable Maxicode

Set Length Range for Maxicode

The engine can be configured to only decode Maxicode barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in *Appendix 8*.



Set the Minimum Length (Default: 1)



Set the Maximum Length (Default: 150)





0006010

Enter Setup

Chinese Sensible Code

Restore Factory Defaults



0508000

Restore the Factory Defaults of Chinese Sensible Code

Enable/Disable Chinese Sensible Code



0508020

Enable Chinese Sensible Code



0508010

** Disable Chinese Sensible Code

Set Length Range for Chinese Sensible Code

The engine can be configured to only decode Chinese Sensible barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.

For more information, see the *j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology* in **Appendix 8**.



0508030

Set the Minimum Length (Default: 1)



0508040

Set the Maximum Length (Default: 7827)



0006000

** Exit Setup



Chinese Sensible Code Inverse

Regular Barcode: Dark bars on a bright background.

Inverse Barcode: Bright bars on a dark background.



**** Decode Regular Chinese Sensible Barcodes Only**



Decode Inverse Chinese Sensible Barcodes Only



Decode Both



Chapter 9 Troubleshooting

FAQ

Q: How to show barcode data in a text file (output data in a cursor)?

A: Enable the USB HID-KBW feature. But only characters and digits available on the keyboard can be sent.

Q: What are compatible/supported barcode types?

A: See the User Guide.

Q: How to change the format from ISBN-13 into ISBN-10?

A: Disable EAN-13 and then enable ISBN and ISBN-10.

Q: Some barcodes can't be read.

- a) Find out the barcode type and check if the barcode type is enabled. See Appendix 1: Factory Defaults Table for default barcode types.
- b) If the barcode type is enabled, check whether the check digit verification and length range settings match the barcodes.
- c) If the barcodes are stained, defaced, torn, distorted or poorly printed, try barcodes of good print quality. If you need to scan barcodes off mobile phones, enable the Mobile Phone Mode.
- d) Provide such information as model number, firmware version and barcode type when contacting our technical support.

Q: Some barcodes are decoded incorrectly.

- a) Check whether the check digit verification and length range settings match the barcodes.
- b) Provide such information as model number, firmware version and barcode type when contacting our technical support.

Q: Barcodes can be read, but cannot be displayed.

A: If barcodes contain non-alphanumeric character(s), change the communication mode (USB COM Port Emulation recommended).

Q: The device is frozen or unresponsive.

- a) Check if the device is properly connected and powered up.
- b) Send the Restore All Factory Defaults command to the device via a serial cable or USB cable.

Q: How to enable/disable terminating character (Carriage Return or Line Feed)?

A: See the User Guide.

Q: The device fails to communicate with QuickSet or UExpress.

A: Enable the USB Datapipe or USB COM Port Emulation feature.

Appendix

Appendix 1: Factory Defaults Table

| Parameter | Factory Default | Remark |
|--|--|--------------------------------|
| System Settings | | |
| Barcode Programming | Disabled | |
| Programming Barcode Data | Do not send | |
| Illumination | Normal | |
| Aiming | Normal | |
| Good Read Beep | Enabled Type 1, 80ms (Duration), 2730Hz (Frequency), Loud (Volume) | |
| Startup Beep | Enabled | |
| Good Read LED | Enabled, 20ms (Duration) | |
| Scan Mode | Sense Mode | |
| Decode Session Timeout | 3000ms | Range: 500-3600000ms |
| Timeout between Decodes (Same Barcode) | Disabled, 1500ms | Range: 0-3600000ms |
| Decode Area | Whole Area Decoding | |
| Central Area | 20% | |
| Send Product Information upon Startup | Disabled | |
| Communication Interfaces | | |
| Baud Rate | 9600 | Serial Communication Interface |
| Parity Check | None | Serial Communication Interface |
| Number of Data Bits | 8 | Serial Communication Interface |
| Number of Stop Bits | 1 | Serial Communication Interface |
| Hardware Flow Control | Disabled | Serial Communication Interface |
| USB Country Keyboard Type | US | USB HID-KBW |
| Beep on Unknown Character | Disabled | USB HID-KBW |

| | | |
|------------------------------|------------------------------|---|
| Emulate ALT+Keypad | Disabled | USB HID-KBW |
| Function Key Mapping | Disabled | USB HID-KBW |
| Inter-Keystroke Delay | No Delay | USB HID-KBW |
| Caps Lock | Off | USB HID-KBW |
| Convert Case | No Case Conversion | USB HID-KBW |
| Emulate Numeric Keypad | Disabled | USB HID-KBW |
| Data Formatting | | |
| All Prefix/Suffix | Disabled | |
| Prefix Sequence | Code ID+Custom Prefix+AIM ID | Code ID+Custom Prefix+AIM ID+Data+Custom Suffix + Terminating Character |
| AIM ID Prefix | Disabled | |
| Code ID Prefix | Disabled | 1 or 2 English letters |
| Custom Prefix | Disabled | Max. 10 characters |
| Custom Suffix | Disabled | Max. 10 characters |
| Terminating Character Suffix | Disabled | Max. 2 characters |
| Data Packing | Disabled | |
| Symbologies | | |
| Code 128 | | |
| Code 128 | Enabled | |
| Maximum Length | 48 | |
| Minimum Length | 1 | |
| EAN-8 | | |
| EAN-8 | Enabled | |
| Check Digit | Transmit | |
| 2-Digit Add-On Code | Disabled | |
| 5-Digit Add-On Code | Disabled | |
| Extend to EAN-13 | Disabled | |
| EAN-13 | | |
| EAN-13 | Enabled | |
| Check Digit | Transmit | |
| 2-Digit Add-On Code | Disabled | |
| 5-Digit Add-On Code | Disabled | |

| UPC-E | | |
|---------------------------|-----------------|---|
| UPC-E | Enabled | |
| Check Digit | Transmit | |
| 2-Digit Add-On Code | Disabled | |
| 5-Digit Add-On Code | Disabled | |
| Extend to UPC-A | Disabled | |
| System Character "0" | Do not transmit | |
| UPC-A | | |
| UPC-A | Enabled | |
| Check Digit | Transmit | |
| 2-Digit Add-On Code | Disabled | |
| 5-Digit Add-On Code | Disabled | |
| Preamble Character "0" | Do not transmit | |
| Interleaved 2 of 5 | | |
| Interleaved 2 of 5 | Enabled | |
| Check Digit Verification | Disabled | |
| Check Digit | Do not transmit | |
| Maximum Length | 80 | |
| Minimum Length | 6 | Minimum length supported: 4 |
| Discrete Length | Disabled | |
| ITF-6 | | |
| ITF-6 | Disabled | |
| ITF-14 | | |
| ITF-14 | Disabled | |
| Code 39 | | |
| Code 39 | Enabled | |
| Check Digit Verification | Disabled | |
| Start/Stop Character | Transmit | |
| Code 39 Full ASCII | Disabled | |
| Maximum Length | 48 | |
| Minimum Length | 4 | Minimum length supported: 4 (including start/stop characters and check digit) |

| Codabar | | |
|--|---|-----------------------------|
| Codebar | Enabled | |
| Check Digit Verification | Disabled | |
| Start/Stop Character | ABCD/ABCD format Uppercase Transmit | |
| Maximum Length | 60 | |
| Minimum Length | 2 | |
| Code 93 | | |
| Code 93 | Disabled | |
| Check Digit Verification | Enabled | |
| Check Digit | Do not transmit | |
| Maximum Length | 48 | |
| Minimum Length | 1 | Minimum length supported: 1 |
| GS1-128 (UCC/EAN-128) | | |
| GS1-128 (UCC/EAN-128) | Enabled | |
| GS1 Databar(RSS) | | |
| GS1 Databar(RSS) | Enabled | |
| Application Identifier "01" | Transmit | |
| GS1 Composite (EAN•UCC Composite) | | |
| GS1 Composite | Disabled | |
| UPC/EAN Composite | Disabled | |
| Code 11 | | |
| Code 11 | Disabled | |
| Check Digit | Transmit | |
| Check Digit Verification | 1 Check Digit, MOD11 | |
| Maximum Length | 48 | |
| Minimum Length | 4 | Minimum length supported: 4 |
| ISBN | | |
| ISBN | Disabled | |
| ISBN Format | ISBN-13 | |
| Matrix 2 of 5(European Matrix 2 of 5) | | |
| Maxtrix 2 of 5 | Disabled | |

| | | |
|--------------------------|-------------------------------------|-----------------------------|
| Check Digit Verification | Disabled | |
| Maximum Length | 80 | |
| Minimum Length | 4 | Minimum length supported: 4 |
| Industrial 25 | | |
| Industrial 25 | Disabled | |
| Check Digit Verification | Disabled | |
| Maximum Length | 48 | |
| Minimum Length | 6 | Minimum length supported: 4 |
| Standard 25 | | |
| Standard 25 | Disabled | |
| Check Digit Verification | Disabled | |
| Maximum Length | 48 | |
| Minimum Length | 6 | Minimum length supported: 4 |
| Plessey | | |
| Plessey | Disabled | |
| Check Digit Verification | Enabled | |
| Check Digit | Transmit | |
| Maximum Length | 48 | |
| Minimum Length | 4 | Minimum length supported: 4 |
| MSI-Plessey | | |
| MSI-Plessey | Disabled | |
| Check Digit Verification | 1 Check Digit, MOD10 | |
| Check Digit | Transmit | |
| Maximum Length | 48 | |
| Minimum Length | 4 | Minimum length supported: 4 |
| PDF417 | | |
| PDF417 | Enabled | |
| Read Single PDF417 Only | Enabled | |
| Maximum Length | 2710 | |
| Minimum Length | 1 | |
| PDF417 Inverse | Decode regular PDF417 barcodes only | |
| QR Code | | |

| | | |
|---------------------------------|---|--|
| QR Code | Enabled | |
| QR Twin Code | Read Single QR Only | |
| Maximum Length | 7089 | |
| Minimum Length | 1 | |
| Aztec | | |
| Aztec | Disabled | |
| Read Multi-barcodes on an Image | Disabled | |
| Number of Barcodes | 1 | |
| Maximum Length | 3832 | |
| Minimum Length | 1 | |
| Data Matrix | | |
| Data Matrix | Enabled | |
| DM Twin Code | Read Single Data Matrix Only | |
| Read Rectangular Barcode | Enabled | |
| Data Matrix Inverse | Decode regular Data Matrix barcodes only | |
| Maximum Length | 3116 | |
| Minimum Length | 1 | |
| Maxicode | | |
| Maxicode | Disabled | |
| Maximum Length | 150 | |
| Minimum Length | 1 | |
| Chinese Sensible Code | | |
| Chinese Sensible Code | Disabled | |
| Chinese Sensible Code Inverse | Decode regular Chinese Sensible barcodes only | |
| Maximum Length | 7827 | |
| Minimum Length | 1 | |

Appendix 2: AIM ID Table

| Symbology | AIM ID | Possible AIM ID Modifiers (m) |
|-----------------------|--------|-------------------------------|
| Code 128 |]C0 | |
| GS1-128 (UCC/EAN-128) |]C1 | |
| EAN-8 |]E4 | |
| EAN-13 |]E0 | |
| EAN-13 with Addon |]E3 | |
| UPC-E |]E0 | |
| UPC-E with Addon |]E3 | |
| UPC-A |]E0 | |
| UPC-A with Addon |]E3 | |
| Interleaved 2 of 5 |]Im | 0,1,3 |
| ITF-6 |]Im | 1,3 |
| ITF-14 |]Im | 1,3 |
| Matrix 2 of 5 |]X0 | |
| Code 39 |]Am | 0,1,3,4,5,7 |
| Codabar |]Fm | 0,2,4 |
| Code 93 |]G0 | |
| Code 11 |]Hm | 0,1,3 |
| ISBN |]X0 | |
| Industrial 25 |]S0 | |
| Standard 25 |]R0 | |
| Plessey |]P0 | |
| MSI-Plessey |]Mm | 0,1 |
| GS1 Databar(RSS) |]e0 | |
| GS1 Composite Code |]em | 0-3 |
| PDF417 |]Lm | 0-2 |
| QR Code |]Qm | 0-6 |
| Aztec |]zm | 0-9, A-C |
| Data Matrix |]dm | 0-6 |
| Maxicode |]Um | 0-3 |
| Chinese Sensible Code |]X0 | |

Note: “m” represents the AIM modifier character. Refer to ISO/IEC 15424:2008 Information technology – Automatic identification and data capture techniques – Data Carrier Identifiers (including Symbology Identifiers) for AIM modifier character details.

Appendix 3: Code ID Table

| Symbology | Code ID |
|---------------------------------------|---------|
| Code 128 | j |
| GS1-128 (UCC/EAN-128) | j |
| EAN-8 | d |
| EAN-13 | d |
| UPC-E | c |
| UPC-A | c |
| Interleaved 2 of 5 | e |
| ITF-6 | e |
| ITF-14 | e |
| Code 39 | b |
| Codabar | a |
| Code 93 | i |
| Code 11 | H |
| GS1 Databar(RSS) | R |
| GS1Composite Code(EAN•UCC Composite) | y |
| ISBN | B |
| Matrix 2 of 5(European Matrix 2 of 5) | v |
| Industrial 25 | l |
| Standard 25 | f |
| Plessey | n |
| MSI-Plessey | m |
| PDF417 | r |
| QR Code | s |
| Aztec | z |
| Data Matrix | u |
| Maxicode | x |
| Chinese Sensible Code | h |

Appendix 4: ASCII Table

| Hex | Dec | Char |
|-----|-----|--------------------------------|
| 00 | 0 | NUL (Null char.) |
| 01 | 1 | SOH (Start of Header) |
| 02 | 2 | STX (Start of Text) |
| 03 | 3 | ETX (End of Text) |
| 04 | 4 | EOT (End of Transmission) |
| 05 | 5 | ENQ (Enquiry) |
| 06 | 6 | ACK (Acknowledgment) |
| 07 | 7 | BEL (Bell) |
| 08 | 8 | BS (Backspace) |
| 09 | 9 | HT (Horizontal Tab) |
| 0a | 10 | LF (Line Feed) |
| 0b | 11 | VT (Vertical Tab) |
| 0c | 12 | FF (Form Feed) |
| 0d | 13 | CR (Carriage Return) |
| 0e | 14 | SO (Shift Out) |
| 0f | 15 | SI (Shift In) |
| 10 | 16 | DLE (Data Link Escape) |
| 11 | 17 | DC1 (XON) (Device Control 1) |
| 12 | 18 | DC2 (Device Control 2) |
| 13 | 19 | DC3 (XOFF) (Device Control 3) |
| 14 | 20 | DC4 (Device Control 4) |
| 15 | 21 | NAK (Negative Acknowledgement) |
| 16 | 22 | SYN (Synchronous Idle) |
| 17 | 23 | ETB (End of Trans. Block) |
| 18 | 24 | CAN (Cancel) |
| 19 | 25 | EM (End of Medium) |
| 1a | 26 | SUB (Substitute) |
| 1b | 27 | ESC (Escape) |
| 1c | 28 | FS (File Separator) |

| | | | |
|----|----|----|-------------------------------|
| 1d | 29 | GS | (Group Separator) |
| 1e | 30 | RS | (Request to Send) |
| 1f | 31 | US | (Unit Separator) |
| 20 | 32 | SP | (Space) |
| 21 | 33 | ! | (Exclamation Mark) |
| 22 | 34 | " | (Double Quote) |
| 23 | 35 | # | (Number Sign) |
| 24 | 36 | \$ | (Dollar Sign) |
| 25 | 37 | % | (Percent) |
| 26 | 38 | & | (Ampersand) |
| 27 | 39 | ` | (Single Quote) |
| 28 | 40 | (| (Right / Closing Parenthesis) |
| 29 | 41 |) | (Right / Closing Parenthesis) |
| 2a | 42 | * | (Asterisk) |
| 2b | 43 | + | (Plus) |
| 2c | 44 | , | (Comma) |
| 2d | 45 | - | (Minus / Dash) |
| 2e | 46 | . | (Dot) |
| 2f | 47 | / | (Forward Slash) |
| 30 | 48 | 0 | |
| 31 | 49 | 1 | |
| 32 | 50 | 2 | |
| 33 | 51 | 3 | |
| 34 | 52 | 4 | |
| 35 | 53 | 5 | |
| 36 | 54 | 6 | |
| 37 | 55 | 7 | |
| 38 | 56 | 8 | |
| 39 | 57 | 9 | |
| 3a | 58 | : | (Colon) |
| 3b | 59 | ; | (Semi-colon) |
| 3c | 60 | < | (Less Than) |
| 3d | 61 | = | (Equal Sign) |

| | | | |
|----|----|---|---------------------------|
| 3e | 62 | > | (Greater Than) |
| 3f | 63 | ? | (Question Mark) |
| 40 | 64 | @ | (AT Symbol) |
| 41 | 65 | A | |
| 42 | 66 | B | |
| 43 | 67 | C | |
| 44 | 68 | D | |
| 45 | 69 | E | |
| 46 | 70 | F | |
| 47 | 71 | G | |
| 48 | 72 | H | |
| 49 | 73 | I | |
| 4a | 74 | J | |
| 4b | 75 | K | |
| 4c | 76 | L | |
| 4d | 77 | M | |
| 4e | 78 | N | |
| 4f | 79 | O | |
| 50 | 80 | P | |
| 51 | 81 | Q | |
| 52 | 82 | R | |
| 53 | 83 | S | |
| 54 | 84 | T | |
| 55 | 85 | U | |
| 56 | 86 | V | |
| 57 | 87 | W | |
| 58 | 88 | X | |
| 59 | 89 | Y | |
| 5a | 90 | Z | |
| 5b | 91 | [| (Left / Opening Bracket) |
| 5c | 92 | \ | (Back Slash) |
| 5d | 93 |] | (Right / Closing Bracket) |
| 5e | 94 | ^ | (Caret / Circumflex) |

| | | |
|----|-----|-------------------------|
| 5f | 95 | _ (Underscore) |
| 60 | 96 | ' (Grave Accent) |
| 61 | 97 | a |
| 62 | 98 | b |
| 63 | 99 | c |
| 64 | 100 | d |
| 65 | 101 | e |
| 66 | 102 | f |
| 67 | 103 | g |
| 68 | 104 | h |
| 69 | 105 | i |
| 6a | 106 | j |
| 6b | 107 | k |
| 6c | 108 | l |
| 6d | 109 | m |
| 6e | 110 | n |
| 6f | 111 | o |
| 70 | 112 | p |
| 71 | 113 | q |
| 72 | 114 | r |
| 73 | 115 | s |
| 74 | 116 | t |
| 75 | 117 | u |
| 76 | 118 | v |
| 77 | 119 | w |
| 78 | 120 | x |
| 79 | 121 | y |
| 7a | 122 | z |
| 7b | 123 | { (Left/ Opening Brace) |
| 7c | 124 | (Vertical Bar) |
| 7d | 125 | } (Right/Closing Brace) |
| 7e | 126 | ~ (Tilde) |
| 7f | 127 | DEL (Delete) |

Appendix 5: Country Code Table

| Country/Language | Code | Country/Language | Code |
|------------------|------|---------------------|------|
| U.S. | 0 | Netherlands(Dutch) | 14 |
| Belgium | 1 | Norway | 15 |
| Brazil | 2 | Poland | 16 |
| Canada(French) | 3 | Portugal | 17 |
| Czechoslovakia | 4 | Romania | 18 |
| Denmark | 5 | Russia | 19 |
| Finland(Swedish) | 6 | Slovakia | 21 |
| France | 7 | Spain | 22 |
| Germany/Austria | 8 | Sweden | 23 |
| Greece | 9 | Switzerland(German) | 24 |
| Hungary | 10 | Turkey F | 25 |
| Israel(Hebrew) | 11 | Turkey Q | 26 |
| Italy | 12 | U.K. | 27 |
| Latin-American | 13 | Japan | 28 |

Appendix 6: ASCII Function Key Mapping Table

| ASCII Function | ASCII Value (HEX) | No Function Key Mapping | Function Key Mapping |
|--------------------------------|-------------------|-------------------------|-------------------------|
| NUL (Null char.) | 00 | Null | Ctrl+2 |
| SOH (Start of Header) | 01 | Keypad Enter | Ctrl+A |
| STX (Start of Text) | 02 | Caps Lock | Ctrl+B |
| ETX (End of Text) | 03 | Null | Ctrl+C |
| EOT (End of Transmission) | 04 | Null | Ctrl+D |
| ENQ (Enquiry) | 05 | Null | Ctrl+E |
| ACK (Acknowledgment) | 06 | Null | Ctrl+F |
| BEL (Bell) | 07 | Enter | Ctrl+G |
| BS (Backspace) | 08 | Left Arrow | Ctrl+H |
| HT (Horizontal Tab) | 09 | Horizontal Tab | Ctrl+I |
| LF (Line Feed) | 0A | Down Arrow | Ctrl+J |
| VT (Vertical Tab) | 0B | Vertical Tab | Ctrl+K |
| FF (Form Feed) | 0C | Backspace | Ctrl+L |
| CR (Carriage Return) | 0D | Enter | Ctrl+M |
| SO (Shift Out) | 0E | Insert | Ctrl+N |
| SI (Shift In) | 0F | Esc | Ctrl+O |
| DLE (Data Link Escape) | 10 | F11 | Ctrl+P |
| DC1 (XON) (Device Control 1) | 11 | Home | Ctrl+Q |
| DC2 (Device Control 2) | 12 | Print Screen | Ctrl+R |
| DC3 (XOFF) (Device Control 3) | 13 | Delete | Ctrl+S |
| DC4 (Device Control 4) | 14 | tab+shift | Ctrl+T |
| NAK (Negative Acknowledgement) | 15 | F12 | Ctrl+U |
| SYN (Synchronous Idle) | 16 | F1 | Ctrl+V |
| ETB (End of Trans. Block) | 17 | F2 | Ctrl+W |
| CAN (Cancel) | 18 | F3 | Ctrl+X |
| EM (End of Medium) | 19 | F4 | Ctrl+Y |
| SUB (Substitute) | 1A | F5 | Ctrl+Z |
| ESC (Escape) | 1B | F6 | See the following table |
| FS (File Separator) | 1C | F7 | |
| GS (Group Separator) | 1D | F8 | |
| RS (Request to Send) | 1E | F9 | |
| US (Unit Separator) | 1F | F10 | |

ASCII Function Key Mapping Table (Continued)

The function key mappings of the last five characters in the table above differ from one keyboard layout to another.

| Country/ Keyboard Layout | Function Key Mapping | | | | |
|-----------------------------|----------------------|--------|---------|--------|--------|
| | 1B | 1C | 1D | 1E | 1F |
| United States | Ctrl+[| Ctrl+\ | Ctrl+] | Ctrl+6 | Ctrl+- |
| Belgium | Ctrl+[| Ctrl+< | Ctrl+] | Ctrl+6 | Ctrl+- |
| Scandinavia | Ctrl+8 | Ctrl+< | Ctrl+9 | Ctrl+6 | Ctrl+- |
| France | Ctrl+^ | Ctrl+8 | Ctrl+\$ | Ctrl+6 | Ctrl+= |
| Germany | | Ctrl+Ã | Ctrl++ | Ctrl+6 | Ctrl+- |
| Italy | | Ctrl+\ | Ctrl++ | Ctrl+6 | Ctrl+- |
| Switzerland | | Ctrl+< | Ctrl+. | Ctrl+6 | Ctrl+- |
| United Kingdom | Ctrl+[| Ctrl+ç | Ctrl+] | Ctrl+6 | Ctrl+- |
| Denmark | Ctrl+8 | Ctrl+\ | Ctrl+9 | Ctrl+6 | Ctrl+- |
| Norway | Ctrl+8 | Ctrl+\ | Ctrl+9 | Ctrl+6 | Ctrl+- |
| Spain | Ctrl+[| Ctrl+\ | Ctrl+] | Ctrl+6 | Ctrl+- |

Appendix 7: Symbology ID Number

| Symbology | ID Number | Symbology | ID Number |
|----------------------|-----------|-----------------------|-----------|
| Code 128 | 002 | Standard 2 of 5 | 026 |
| GS1-128 (UCC/EAN128) | 003 | Plessey | 027 |
| EAN-8 | 004 | Code11 | 028 |
| EAN-13 | 005 | MSI/Plessey | 029 |
| UPC-E | 006 | Composite Code | 030 |
| UPC-A | 007 | GS1-Databar | 031 |
| Interleaved 2 of 5 | 008 | PDF417 | 032 |
| ITF-14 | 009 | QR Code | 033 |
| ITF-6 | 010 | Aztec Code | 034 |
| Matrix 2 of 5 | 011 | Data Matrix | 035 |
| Code 39 | 013 | Maxicode | 036 |
| Codabar | 015 | Chinese Sensible Code | 039 |
| Code 93 | 017 | | |
| ISBN | 024 | | |
| Industrial 2 of 5 | 025 | | |

Appendix 8: Parameter Programming Examples

The following examples show you how to program parameters by scanning programming barcodes.

a. Program the Decode Session Timeout

Example: Set the decode session timeout to 1500ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Decode Session Timeout** barcode.
3. Scan the numeric barcodes “1”, “5”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

b. Program the Timeout between Decodes (Same Barcode)

Example: Set the timeout between decodes (same barcode) to 1000ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Timeout between Decodes (Same Barcode)** barcode.
3. Scan the numeric barcodes “1”, “0”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

c. Program the Central Area

Example: Set the percentage of central area to 20%

1. Scan the **Enter Setup** barcode.
 2. Scan the **Specify Central Area** barcode.
 3. Scan the numeric barcodes “2” and “0”.
 4. Scan the **Save** barcode.
 5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

d. Program the Duration of Good Read Beep (Type 1)

Example: Set the good read beep duration to 100ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Custom (20~300ms)** barcode.
3. Scan the numeric barcodes “1”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

e. Program the Frequency of Good Read Beep (Type 1)

Example: Set the good read beep frequency to 3000Hz

1. Scan the **Enter Setup** barcode.
2. Scan the **Custom (20~20000 Hz)** barcode.
3. Scan the numeric barcodes “3”, “0”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

f. Program the Good Read LED Duration

Example: Set the good read LED duration to 2000ms

1. Scan the **Enter Setup** barcode.
 2. Scan the **Custom (1~10000ms)** barcode.
 3. Scan the numeric barcodes “2”, “0”, “0” and “0”.
 4. Scan the **Save** barcode.
 5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

g. Program the Custom Prefix/Suffix

Example: Set the custom prefix to “CODE”

1. Check the hex values of “CODE” in the ASCII Table. (“CODE”: 43, 4F, 44, 45)
2. Scan the **Enter Setup** barcode.
3. Scan the **Set Custom Prefix** barcode.
4. Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

h. Program the Terminating Character Suffix

Example: Set the terminating character suffix to 0x0A

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Terminating Character Suffix** barcode.
3. Scan the numeric barcodes “0” and “A”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

i. Program the Code ID

Example: Set the Code ID of PDF417 to “p”

1. Check the hex value of “p” in the ASCII Table. (“p”: 70)
 2. Scan the **Enter Setup** barcode.
 3. Scan the **Modify PDF417 Code ID** barcode.
 4. Scan the numeric barcodes “7” and “0”.
 5. Scan the **Save** barcode.
 6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

j. Program the Length Range (Maximum/Minimum Lengths) for a Symbology

Note: For 1D symbologies, if minimum length is set to be greater than maximum length, the engine only decodes barcodes with either the minimum or maximum length. If you only want to read barcodes with a specific length, set both minimum and maximum lengths to be that desired length.

Example: Set the engine to decode Code 128 barcodes containing between 8 and 12 characters

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”.
4. Scan the **Save** barcode.
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes “1” and “2”.
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

k. Program the Discrete Lengths for Interleaved 2 of 5

Example 1: Set the engine to decode Interleaved 2 of 5 barcodes containing either 12 or 24 characters

1. Scan the **Enter Setup** barcode.
2. Scan the **Enable the Discrete Lengths** barcode.
3. Scan the **Set the Discrete Length** barcode.
4. Scan the numeric barcodes “0”, “1” and “2”.
5. Scan the **Save** barcode.
6. Scan the **Set the Discrete Length** barcode.
7. Scan the numeric barcodes “0”, “2” and “4”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

Example 2: Set the engine to decode Interleaved 2 of 5 barcodes containing between 12 and 24 characters

1. Scan the **Enter Setup** barcode.
2. Scan the **Enable the Discrete Lengths** barcode.”
3. Scan the **Set the Discrete Length** barcode.
4. Scan the numeric barcodes “0”, “1” and “2”.
5. Scan the numeric barcodes “0”, “2” and “4”.
6. Scan the **Save** barcode.
7. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

Appendix 9: F-Key Barcodes

When the HID-KBW feature is enabled, scanning one of the following barcodes will send the corresponding function key.

F1~F6



┘
F1



┘
F2



┘
F3



┘
F4



→
F5




←
F6

F7~F12




F7



F8




F9



F10



F11



F12

Appendix 10: Digit Barcodes

0~9



0000000

0



0000050

5



0000010

1



0000060

6



0000020

2



0000070

7



0000030

3



0000080

8



0000040

4



0000090

9

A~F



A



B



C



D



E



F

Appendix 11: Save/Cancel Barcodes

After reading numeric barcode(s), you need to scan the **Save** barcode to save the data. If you scan the wrong digit(s), you can either scan the **Cancel** barcode and then start the configuration all over again, or scan the **Delete the Last Digit** barcode and then the correct digit, or scan the **Delete All Digits** barcode and then the digits you want.

For instance, after reading the **Maximum Length** barcode and numeric barcodes “1”, “2” and “3”, you scan:

- ✧ **Delete the Last Digit:** The last digit “3” will be removed.
- ✧ **Delete All Digits:** All digits “123” will be removed.
- ✧ **Cancel:** The maximum length configuration will be cancelled. And the engine is still in the setup mode.



0000160

Save



0000170

Delete the Last Digit



0000180

Delete All Digits



0000190

Cancel



Headquarters / 总部

福建新大陆自动识别技术有限公司

地址: 福建省福州市马尾区儒江西路 1 号新大陆科技园

邮编: 350015

电话: +86 - (0) 591-83979222

传真: +86 - (0) 591-83979208

E-mail: marketing@nlscan.com

WEB: www.nlscan.com

Newland Europe BV/ 欧洲新大陆有限公司

Rolweg 25, 4104 AV Culemborg, The Netherlands

TEL: +31 (0) 345 87 00 33

FAX: +31 (0) 345 87 00 39

Email: sales@newland-id.com

WEB: www.newland-id.com

Tech Support: tech-support@newland-id.com

Newland North America Inc. / 北美新大陆有限公司

Address: 46559 Fremont Blvd., Fremont, CA 94538, USA

TEL: 510 490 3888

Fax: 510 490 3887

Email: info@newlandna.com

WEB: www.newlandna.com

Newland Taiwan Inc. / 台湾新大陆资讯科技股份有限公司

7F-6, No. 268, Liancheng Rd., Zhonghe Dist. 235, New Taipei City, Taiwan

新北市 235 中和區連城路 268 號 7 樓之 6 (遠東世紀廣場 J 棟)

TEL: +886 2 7731 5388

FAX: +886 2 7731 5389

Email: sales.tw@newland-id.com

WEB: www.newland-id.com.tw